

# Parts List and Diagram

Part	Description	Qty	Part	Description	Qty	Part	Description	Qty
1	Base Frame	1	17	Hook	1	33	Oil Nozzle	1
2	Lifting Arm	1	18	Shaft	1	34	Split Pin	1
3	Long Connecting Bar	2	19	Washer 8	2	35	Hydraulic Ram	1
4	Short Connecting Bar	2	20	Wing Nut M8	1	36	Release Valve	1
5	Retaining Ring 18	8	21	Nut M8	1	37	Handle	1
6	Side Tilt Knob	1	22	Shaft	1	38	Bolt M12x30	2
7	Bushing	1	23	Bracket	1	39	Spring Washer 12	2
8	Shaft	1	24	Shaft	1	40	3" Swivel Caster	4
9	Nut M12	2	25	Lock Nut M10	1	41	Bolt M8x20	8
10	Shaft	1	26	Bearing 8101	2	42	Nut M16	2
11	Retaining Ring 22	2	27	Shaft	1	43	Washer 16	2
12	Saddle	1	28	Shaft	1	44	Shaft	1
13	Chain	1	29	Spring Pin 4*28	2	45	Bolt M8x25	8
14	Bolt M10x20	8	30	Forward Tilt Knob	1	46	Washer 8	16
15	Large Washer 10	8	31	Bolt M8x20	1	47	Lock Nut M8	16
16	Support	4	32	Spring	2			

