



ROTATING TREE STAND



Carefully review all instructions.
If you have a problem, call the manufacturer.
Customer Service: 1-844-921-0800
Email: customer2@winnersarts.com

Before You Begin

IMPORTANT SAFETY INSTRUCTIONS READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

When using electrical products, basic precautions should always be followed, including the following:

- DO NOT use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal use product is not intended for permanent installation or use.
- DO NOT mount or place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- DO NOT secure the wiring of the product with staples, nails or place on sharp hooks.
- DO NOT let bulbs rest on the supply cord or any wire.
- UNPLUG the product when leaving the house, when retiring for the night or if left unattended.
- This is an electric product - not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.
- DO NOT use this product for other than its intended use. The stand is ONLY for Christmas trees.
- DO NOT hang ornaments or other objects from cord, wire or light string.
- DO NOT close doors or windows on the product or extension cords as this may damage the wire insulation.
- DO NOT cover the product with cloth, paper or any material not part of the product when in use.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT use with any extension cord unless plug can be fully inserted. DO NOT alter or replace the plug.
- This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also, unplug any additional strings or products that may be attached to the product. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.
- Use ONLY with an artificial tree. This stand does not contain a well for water.
- Read and follow all instructions that are on the product or provided with the product.
- **SAVE THESE INSTRUCTIONS.**

USE AND CARE INSTRUCTIONS:

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged or frayed wire insulation or cords, cracks in the lamp holders or enclosures, loose connections or exposed copper wire.
- Switch on the motor at the tree stand when you want the tree to revolve. To stop the tree from revolving, switch off the motor.
- When storing the product, carefully remove the product from wherever it is placed, including trees, branches or bushes to avoid any undue strain or stress on the product conductors, connections, and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

USER SERVICING INSTRUCTIONS

FUSE REPLACEMENT:

- Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling cord.
- Open fuse cover, slide open fuse access cover on top of attachment plug toward blades
- Remove fuse carefully, turn fuse holder over to remove fuse.
- Risk of fire. Replace the blown (darkened) fuse only with 5A, 125V fuse for the power cord (provided with product).
- Close fuse cover. Slide closed the fuse access cover on top of attachment plug.
- Risk of fire. DO NOT replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if attachment plug is damaged.

Spare parts included.

Please refer to part numbers when reordering.

 
For indoor use only.

Electrical Rating

for the Stand: ~120V 50/60hz, 0.036A, 4.32W

MAX load: 80 lbs.

MAX height of tree: 7.5 ft.

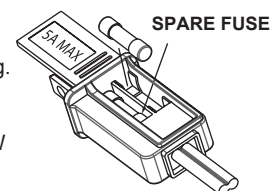

Customer Service: 1-844-921-0800

© 2025 Distributed by

Menard, Inc. Eau Claire, WI 54703 U.S.A.

 
Visit MENARDS.COM

Assembly / Operation Instructions

ASSEMBLING THE TREE STAND


If your tree trunk's diameter is 1.25" (31.8 mm), follow the assembly steps below:

- Step 1. Slide the legs (B) upwards into main engine (A). Make sure the stand on a level surface and near a wall outlet,
- Step 2. then insert the metal trunk of tree (E) into the tree holder (A)
- Step 3. and connect the end cord of stand (C) with the plug of tree's lighting string
- Step 4. then insert the plug of stand (D) into the wall outlet.

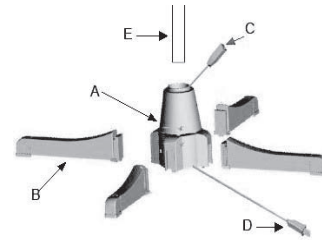

If your tree trunk's diameter is 0.87" (22.2 mm), follow the assembly steps below:

 - Step 1. Slide the legs (B) upwards into main engine (A). Make sure the stand on a level surface and near a wall outlet,
- Step 2. insert the sleeve (F) (provided with product) into tree holder (A),
- Step 3. and insert the tree trunk (E) into the sleeve (F),
- Step 4. and connect the end cord(C) with the plug of tree's lighting string,
- Step 5. then insert the plug of stand (D) into the wall outlet.

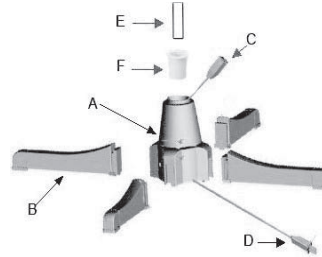

SWITCH FUNCTION (see image below)

- After the tree is fully assembled and all light strings have been connected make sure the tree is secured properly on the stand.
- Before setting to "II" position, make sure any light strings or decorations are not hanging down to avoid getting entangled with the stand and other things near the stand.

