

SKU# 2861330 / SKU# 2861380 – FIBER OPTIC ORNAMENT

**DISTRIBUTOR:**

**HOMEVIEW DESIGN, INC.**

**347 ENTERPRISE PLACE**

**POMONA, CA 91768**

**TEL: 909 – 869 8619**

**ELECTRICAL SPECIFICATIONS:**

AC ADAPTER

Class 2 Power Supply

Model: XY-12100WAUO

UL Listed: E33047944GD

INPUT: 120V~60Hz

OUTPUT:12VAC 1000ma 12VA

EFFICIENCY LEVEL: IV

For indoor and outdoor use

READ THESE INSTRUCTIONS BEFORE USING THE PRODUCT

**ASSEMBLY & USE INSTRUCTIONS**

**THESE INSTRUCTIONS ARE FOR YOUR SAFETY. READ AND FOLLOW ALL INSTRUCTIONS AND WARNING LABELS BEFORE USING .**

**KEEP AWAY FROM WATER!**  
**SAVE THESE INSTRUCTIONS!**



**IMPORTANT SAFETY INSTRUCTIONS**

When using electrical products, basic precautions should always be practiced including the following:

**1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.”**

2. Read and follow all instructions that are on the product or provided with the product.

3. Do not use an extension cord.

4. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the Installation of wiring and clearances from power and lighting conductors.

5. Do not install or use within 10 feet of a pool.

6. Do not use in a bathroom.

7. **WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

8. For a unit intended to be mounted greater than 0.30 m (1 foot) from the ground surface:

**WARNING: Risk of Electric Shock. Mount the unit at a height greater than 1 foot from the ground surface.**

**9. SAVE THESE INSTRUCTIONS –**

**This manual contains important safety and operating instructions for power units.**

## **CARE & USE**

- 1) Product is intended for INDOOR & OUTDOOR USE.
- 2) Adaptor is intended for INDOOR or OUTDOOR USE.
- 3) Do not mount or place the product near gas or electric heaters, fireplaces, candles or other similar sources.
- 4) Do not keep product outdoor during extreme weather conditions.
- 5) Keep the product well ventilated. Do not cover product with cloth, paper or any material not part of the product when in use.
- 6) Do not use with a voltage converter. Use only with the outdoor/indoor adapter that is provided.
- 7) Do not leave the product unattended when children are present.
- 8) Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- 9) Never operate the product if it has a damaged cord or plug. In case the external flexible cable or cord of the adapter is damaged:

**DO NOT USE THE ADAPTER. DO NOT OPEN TO REWIRE!  
THROW ADAPTER AWAY**

- 10) Do not use this product for any other purpose than its intended use.
- 11) Do not try to use the hook for hanging the ornament.
- 12) Not intended for permanent installation.
- 13) **This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it..**

## **BEFORE YOU START**

Check the carton and foam mold, make sure you have all parts as listed below:


- Product
- Adapter (UL listed)
- Mounting stake

## **IMPORTANT**


Do not dispose the foam mold and carton before you complete the assembly. Detachable parts may be sitting there. Keep the package for storage.

## **ASSEMBLY**

- 1) Connect the product to the adapter.

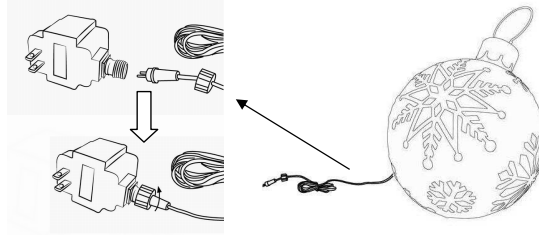

- 2) When using the product outdoors, the mounting stake can be used to secure the product into the ground. Screw the mounting stake into the hole on the bottom of the product.

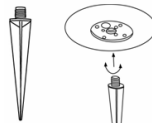

**WARNING: TO AVOID DAMAGING YOUR PRODUCT YOU MUST DIG A HOLE IN THE GROUND BEFORE INSERTING THE MOUNTING STAKE INTO GROUND! DO NOT PUSH OR FORCE MOUNTING STAKE INTO GROUND AFTER ATTACHING IT TO BOTTOM OF PRODUCT!**

- 3) Plug the adapter into a standard electrical AC outlet.
- 4) The product is activated for performance

## INSTRUCTIONS FOR REPLACING BULB & CLEANING

---

### Before you start:

REMOVE ADAPTER FROM OUTLET AND ALLOW BULB TO COOL DOWN

#### CAUTION!

THE BULB MAY BE HOT. BE CAREFUL WHEN HANDLING  
ALWAYS USE A PIECE OF TISSUE WHEN TOUCHING  
THE BULB

### CLEANING INSTRUCTION

Brush off the dust over the surface of the product in a careful manner. Do not use any damp cloth to clean as it will damage the fiberoptic. Wipe with a dry cloth.


### BULB REPLACEMENT

**Diagram 1:** Remove the 3 screws located on the back of the product.

**Diagram 2:** Gently remove the base plate so that the interior mechanism can be taken out.

**Diagram 3:** Unscrew the screws on each side of the bulb and lift the bulb protection ring. Carefully pull out the old bulb and only replace it by a halogen bulb of **12V 10W PUSH-IN TYPE**. Make sure the bulb is correctly installed.

**Diagram 4:** Replace the base plate and screws. Make sure that the halogen bulb is aligned with the clear plastic lens inside the housing in order to achieve maximum brightness of the product. Make sure all 3 screws are properly tightened.

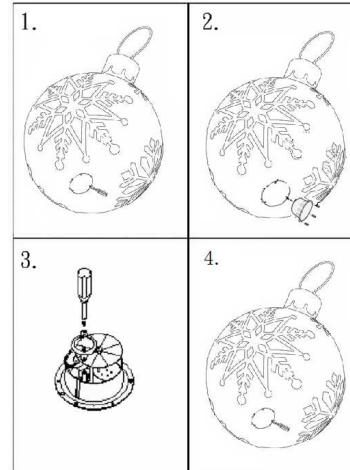

### TROUBLE SHOOTING

If the product is not activated, check these connections:

- 1) Make sure adapter is securely connected to the product.
- 2) Make sure the adapter is securely connected to power outlet.