




Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326
 Monday – Friday 9:00 a.m. – 5:00 p.m. CST

PACKAGE CONTENTS

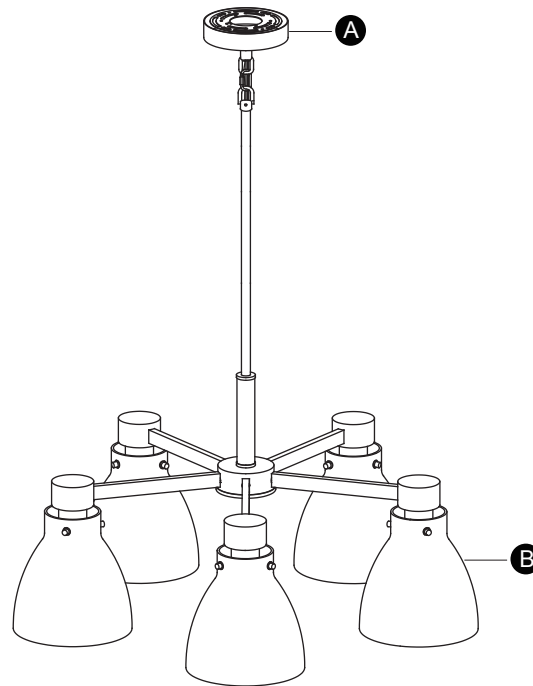

HARDWARE CONTENTS

Note: Hardware not shown actual size.

AA		Mounting plate unit X1	BB		Mounting Screw X2
CC		Wire Connector X3	DD		Bolt Nut X2
EE		Loop Lock X1			
FF		Fixture Screw X15	GG		Vintage Bulb 60W X5

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

WARNING

- Turn off electricity at main fuse box (or circuit breaker box) before beginning installation by removing fuse (or switching off circuit breaker).
- Be careful not to damage or cut the wire insulation (covering) during fixture installation. Do not permit wires to contact any surface having a sharp edge. To do so may damage or cut the wire insulation, which could cause serious injury or death from electric shock.

CAUTION

- All electrical connections must be in agreement with local codes, ordinances or the national electric code (NEC). Contact your municipal building department to learn about your local codes, permits and/or inspections.
- Risk of fire – most dwellings built before 1985 have supply wire rated for 140°F/60°C. Consult a qualified electrician before installation.
- Do not connect this fixture to an electrical system that does not provide a means for equipment grounding. Never use a fixture in a two-wire system that is not grounded. If you are not sure your lighting system has a grounding means, do not attempt to install this fixture. Contact a qualified, licensed electrician for information with regards to proper grounding methods as required by the local electrical code in your area.

PREPARATION


Before beginning assembly, installation or operation of product, make sure all parts are present. Compare parts with package contents list and diagram on previous page. If any part is missing or damaged, do not attempt to assemble, install or operate the product. Contact customer service for replacement parts.

Tools Required for Assembly (not included): Slotted Screwdriver, Phillips Screwdriver, Pliers, Electrical Tape, Wire Cutters, Safety Glasses, Ladder, Wire Stripper.

ASSEMBLY INSTRUCTIONS


Turn off the power at the fuse or circuit box.

1. Secure the mounting plate unit(AA) to outlet box with mounting screws(BB).

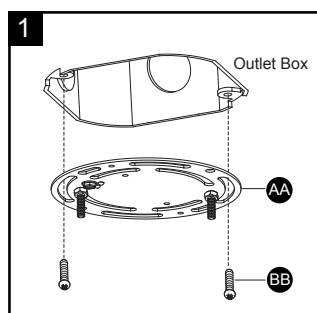

2. Thread the fixture wires from the fixture through the threaded pipe, then secure the threaded pipe tightly to the coupling with the washer and hex nut-b.


Thread the fixture wires from the fixture through the tube, hex nut-a, metal pad, and tube cap in sequence, then attach them to the fixture. (Adjust the hex nut-a to right position against the metal pad).

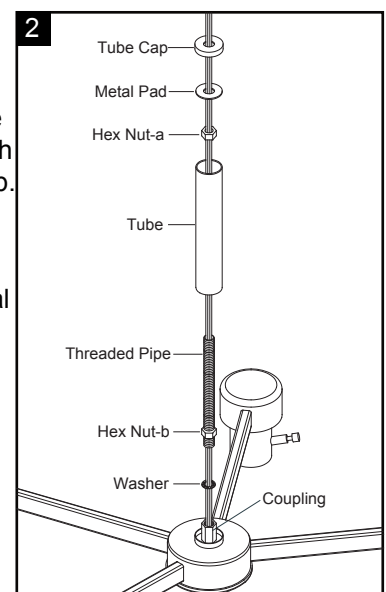


ASSEMBLY INSTRUCTIONS (continued)

3. Rod connection:

- Thread the fixture wires from the fixture through the lower rod, then secure the lower rod onto the fixture using the threaded pipe.
- Thread the fixture wires from the fixture through the middle rods, then secure the middle rods onto the lower rod using the threaded pipe.
- Thread the fixture wires from the fixture through the upper rod, then secure the upper rod onto the middle rod using the threaded pipe.
- Thread the fixture wires from the fixture through the fixture loop, then secure the fixture loop onto the upper rod using the threaded pipe.

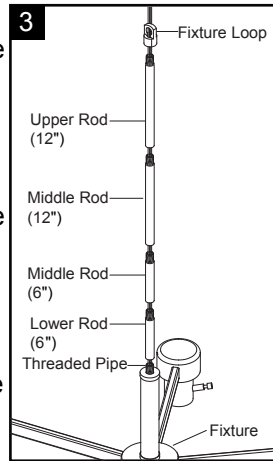

- Thread the fixture wires through the loop lock (EE) and canopy unit (A), then connect canopy unit (A) and fixture loop with loop lock (EE).

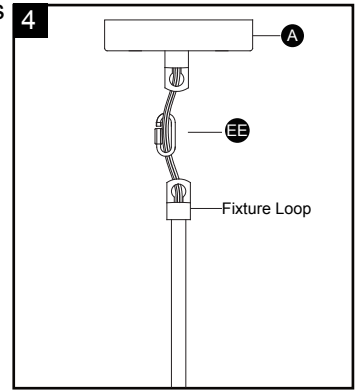


Note: The fixture height can be adjusted to 56" by using the rods. Use fewer rods if shorter height is desired.

- Pull out the source wires from the outlet box, make wire connections using wire connectors (CC) as follows:


---Connect the smooth-coated (marked) wire from the fixture to the black (hot) wire from the power source.

---Connect the ribbed-coated (unmarked) wire from the fixture to the white (neutral) wire from the power source.

---Attach the fixture ground wire (bare wire) to the mounting plate unit (AA) with the green ground screw, then connect fixture ground wire to the house ground wire with a wire connector (CC).

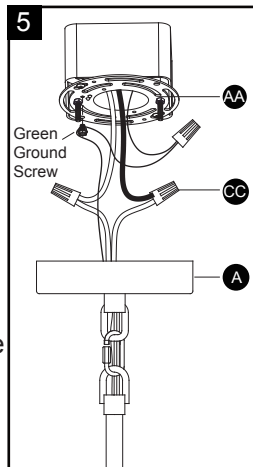


- Attach the canopy unit (A) to the mounting plate unit (AA), then secure the canopy unit (A) with two bolt nuts (DD).

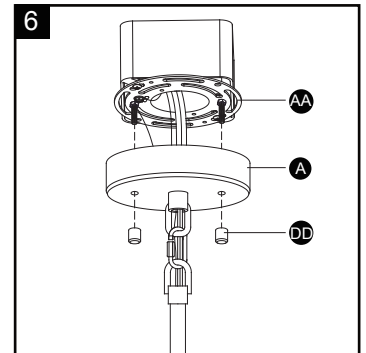

Carefully put the wires back into the outlet box.


- Attach the glass shades (B) to the glass holders and secure the glass shades (B) with the fixture screws (FF).

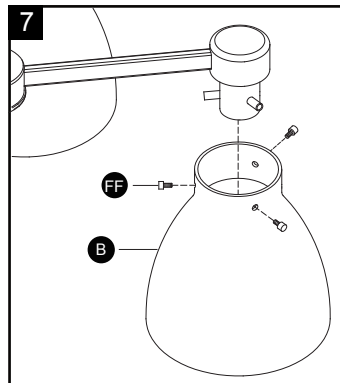

- Install 5x60W medium base vintage bulbs (GG) (included).

See relamping label at socket area or packaging for maximum allowed wattage.

Turn on the power at the fuse or circuit box.

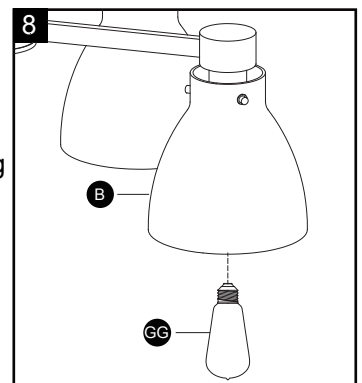

The following parts are available for reorder if damaged or missing. Call our toll free at 1-800-887-6326.

Spare Parts List:

AA Mounting plate unit X1

BB Mounting Screw X2

CC Wire Connector X3

DD Bolt Nut X2

EE Loop Lock X1

FF Fixture Screw 6425FS

GG Vintage Bulb 60W 8072EB

6" Rod 3296RD

12" Rod 3297RD

B Glass Shade 10266CG

Assembly Kit 6412MM(1 SET)

CARE AND MAINTENANCE

- To clean, turn off and wipe with a damp, non-abrasive cloth.

TROUBLESHOOTING

1) The light does not work:

- a) Make sure the wall switch and circuit breaker are on.
- b) Make sure the wiring is correct.

2) Fuse blows or circuit trips when light is turned on.

Check for crossed wires, ensure wiring is correct.

If unable to fix any of the above issues, please consult a certified electrician.

FIVE-YEAR LIMITED WARRANTY: If, during normal use, this PATRIOT LIGHTING® lighting fixture breaks or fails due to a defect in material workmanship within five (5) years from the date of original purchase, simply bring this lighting fixture with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PATRIOT LIGHTING® agrees to have the product or any defective part(s) repaired or replaced with the same or similar PATRIOT LIGHTING® product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. This warranty; (1) excludes expendable parts including but not limited to light bulbs; (2) does not cover damage that has resulted from abuse or misuse; and (3) does not cover any losses, labor, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state.



Questions, problems, missing parts?

Before returning to your retailer, call our customer service at 1-800-887-6326
Monday – Friday 9:00 a.m. – 5:00 p.m. CST