



# RUGER®

**WARNING: READ INSTRUCTIONS CAREFULLY PRIOR TO USE.**

**Notice:** Possession and/or use of pepper spray may be prohibited or regulated in some states or locales. Improper use may result in criminal action, including but not limited to lawsuits, fines, prosecution and even imprisonment. Pepper spray should only be used in cases where you (or someone you are protecting) are in an unavoidable and threatening situation.

**Exposure:** KEEP OUT OF REACH OF CHILDREN. Severe irritant affects eyes, skin and respiratory areas. In case of exposure, rinse eyes with water. Wash skin thoroughly with soap and water. DO NOT RUB. Do not apply creams, salves or lotions. If symptoms persist after 45 minutes, call a physician.

**Caution:** Contents under pressure. Keep away from heat. Do not store above 120° F, below 32° F or in direct sunlight. Use caution when activating in windy conditions. Do not puncture or incinerate can. Do not carry on any passenger aircraft.

- 1. Thumb Trigger
- 2. Spray Nozzle
- 3. Lock Tab
- 4. Pepper Spray



**Disclaimer of Warranties:** To the extent permitted by law, Ruger® and Tornado® shall not be liable for damage, injury, loss, direct or consequential, including death, arising out of the use of, or inability to use, this product. No warranty is expressed or implied. Responsibility for safe and lawful use rests solely with the user.

**The Ruger Ultra Pepper Spray System** features the same capabilities of the Armor Case Pepper Spray, plus:

**125 Decibel Alarm** Screams for attention even if you can't.

**Speed Release** All features activate in less than one second.

**Bright Strobe Light** Confuses attackers and gives you a chance to get away.

**Check Out These Great Ultra Pepper Spray Accessories:**



ARMBAND



VEHICLE DEFENSE



HOME DEFENSE



REPLACEMENT HEAD

**WWW.RUGER.COM/TORNADO**

# ARMOR CASE PEPPER SPRAY

1. **WARNING** When practicing do not press the Thumb Trigger.

Before attaching your Armor Case Pepper Spray to your keys, familiarize yourself with the device.

2. The red Lock Tab should be pushed to the side in the lock position so that the Spray Nozzle opening cannot be seen through the opening in front of the device.

Slide the red Lock Tab over so the nozzle opening shows through the opening in the front of the device. This is the unlocked position. Practice moving from locked to unlocked until you are comfortable with this operation.

3. Your Pepper Spray will shoot from the Spray Nozzle at a slightly upward angle. A sweeping spray motion is most effective in ensuring you hit your intended target.

Point the Armor Case Pepper Spray at the aggressor and press down firmly with your thumb on the Thumb Trigger to release the Pepper Spray. (Do not press button while familiarizing yourself with the product).

4. Now that you are familiar with the operation of your Armor Case Pepper Spray, place the Lock Tab in the locked position and attach your Armor Case Pepper Spray to your keys, bag or other item.

Please ensure that you are familiar with the operation of your Armor Case Pepper Spray, and that you are aware of the applicable laws in your area with respect to the use of this type of product.



LOCKED



UNLOCKED

