User Manual – LENZHAN Electric Spin Scrubber
Model: ANS 8051B

Important Notice:
Please read this user manual carefully before using the electric spin scrubber. Retain the manual for future reference. To prevent battery damage, charge the unit promptly after each use.

Thank you for choosing the LENZHAN Electric Spin Scrubber. This product has been carefully designed and rigorously tested to provide efficient, convenient, and safe cleaning. It is suitable for a wide range of cleaning tasks, including floors, walls, and stubborn stains. We trust it will be a reliable tool to help maintain cleanliness in your home.

Safety Instructions

To ensure safe operation and avoid damage or injury, please adhere to the following precautions:

1. This product should not be used by children without adult supervision.
2. Do not use the device if the charger, plug, or power cord is damaged.
3. Do not immerse the main body of the scrubber in water or any other liquid.
4. Use only original or manufacturer-approved accessories to avoid malfunction or safety risks.
5. Keep fingers and other body parts away from the rotating brush while the scrubber is in operation.
6. Do not operate the scrubber in flammable or explosive environments.
7. Do not disassemble or modify the device. Unauthorized alterations may compromise safety and performance.
8. If the device emits unusual sounds, odors, or smoke, immediately stop use and disconnect it from the power supply.
9. Do not apply excessive pressure during use, as this may damage internal components or reduce cleaning efficiency.
10. Avoid storing or using the product in environments with high humidity, high temperatures, or extreme cold.
11. Ensure that fragile objects are cleared from the surrounding area to prevent accidental damage due to vibration.
12. When not in use, store the device in a dry, safe location out of the reach of children. Always unplug the charger after use.

Battery Maintenance Reminder:
To maintain optimal battery performance, fully recharge the battery after each use. Long periods of disuse without charging may lead to battery degradation.

NOTE:
Before assembling any components of this appliance, ensure that the unit is powered off.

Caution:
Do not use fiber sponges on painted or delicate surfaces such as furniture or automobiles, as they may cause damage.

Preparations Before Use

1. Inspect the spin scrubber to ensure it is clean and in good working condition.
2. If the battery level is low, charge the device using the original USB cable. Use only after it is fully charged.
3. Verify that the brush head is securely installed and not loose. Clear any debris from the surrounding area.
4. Familiarize yourself with the functions of the device by reviewing this manual. Consider wearing protective gloves.
5. Confirm that all accessories are present and organized.

Charging and Safety Precautions

1. Use a charger with an output of DC 5V, 1–2A for safe and effective charging.
2. Ensure the device is powered off before charging. Open the protective cover of the charging port, insert the USB plug completely, and confirm the indicator light is illuminated, signaling that charging has begun. (See Fig. 1)
3. Do not move or impact the scrubber during charging. Disconnect the charger promptly once charging is complete.
4. If the device is not used for an extended period, charge it at least once every three months to maintain battery health.
5. Do not charge the device in humid or high-temperature environments to prevent safety hazards.

Fig. 1



Product Specifications

- Battery Type: Li-Ion
- Battery Capacity: 2500 mAh
- Rotation Speed: 300 RPM / 400 RPM
- Charging Time: Approximately 4 hours
- Maximum Operating Time: Up to 80 minutes
- Input: 5V, 1A

Brush Head Installation and Removal

Installation:

1. Ensure the device is turned off.
2. Align the brush head with the connection port on the main body. (Fig. 2)
3. Push the brush head forward until a "click" is heard, confirming a secure attachment. (Fig. 3, Fig. 4)

Fig. 2 Fig. 3 Fig 4



Removal:

1. Power off the device.
2. Hold the main body with one hand and grasp the brush head with the other.
3. Pull the brush head straight out with steady force.
4. For polishing brushes such as cloth, sponge, or fiber sponge, install the brush head holder first, then attach the desired brush type. (Fig. 5)

Fig. 5



Note:
Use caution during installation and removal to avoid damaging the brush head or the main body of the device.

Brush Head Applications

- **Wide Flat Brush:** Suitable for large surfaces such as floors, tile walls, bathtubs, pools, stoves, carpets, ceramic surfaces, and vehicle wheels.
- **Small Flat Brush:** Ideal for cleaning stoves, sinks, and other small or moderately dirty surfaces.
- **Corner Brush:** Designed for corners, cracks, and hard-to-reach areas such as tile grout and vehicle hubs.
- **Round Brush:** Effective for curved or concave surfaces such as bathtubs, sinks, toilets, and showers.
- **Sponge:** Used for gentle, deep cleaning of delicate or glossy surfaces, such as kitchenware and painted furniture.
- **Cloth:** Used for wiping away water stains and for final surface polishing, including windows.
- **Fiber Sponge:** Suitable for heavily soiled areas where scratching is not a concern. Use with non-corrosive cleaners on items such as gas stoves, range hoods, and kitchenware.
- **Wool Cloth:** Designed for polishing delicate surfaces including paint, leather, car exteriors, sofas, and furniture.



Extension Handle Assembly

1. Connect the two sections of the extension rod by aligning their threaded ends and rotating clockwise until securely fastened. (Fig. 6)
2. Align the handle's front connector with the installation slot at the rear of the device and insert vertically until a “click” is heard, indicating proper installation. (Fig. 7)
3. To adjust the handle length, turn the outer locking collar counterclockwise to the “ON” position. Extend or retract the front metal tube to the desired length, then rotate the collar clockwise to the “OFF” position to lock. (Fig. 8)

Fig. 6 Fig. 7 Fig. 8





Tip:
If the front metal tube cannot be pulled out, the inner lock may be engaged. Grip the tube and rotate counterclockwise until it loosens. (Fig. 9)

Fig. 9



Cleaning and Maintenance

1. To clean the brush head, install it on the device, power on the unit, and immerse approximately two-thirds of the brush in water while rotating for 10–20 seconds. Remove and allow to air dry.
2. Do not clean the brush head with hot water to avoid deformation.
3. Avoid contact between the brush head and acidic or corrosive cleaning agents.
4. If the brush head is deformed due to compression, soak it in boiling water for 5–10 seconds, then place it upright for 3–5 minutes to restore its shape.
5. Wipe the surface of the device with a dry towel after use.
6. Store the device in a cool, dry place. Avoid prolonged exposure to high temperatures or humidity.
7. Charge the device fully before storing for extended periods.

Environmental Protection Notice

Dispose of this product in accordance with local environmental regulations. Please check applicable laws and recycling guidelines in your area.

Disclaimer

The manufacturer is not responsible for damage or injury resulting from misuse, improper maintenance, or unauthorized modifications of the product.

Product Composition Diagram:

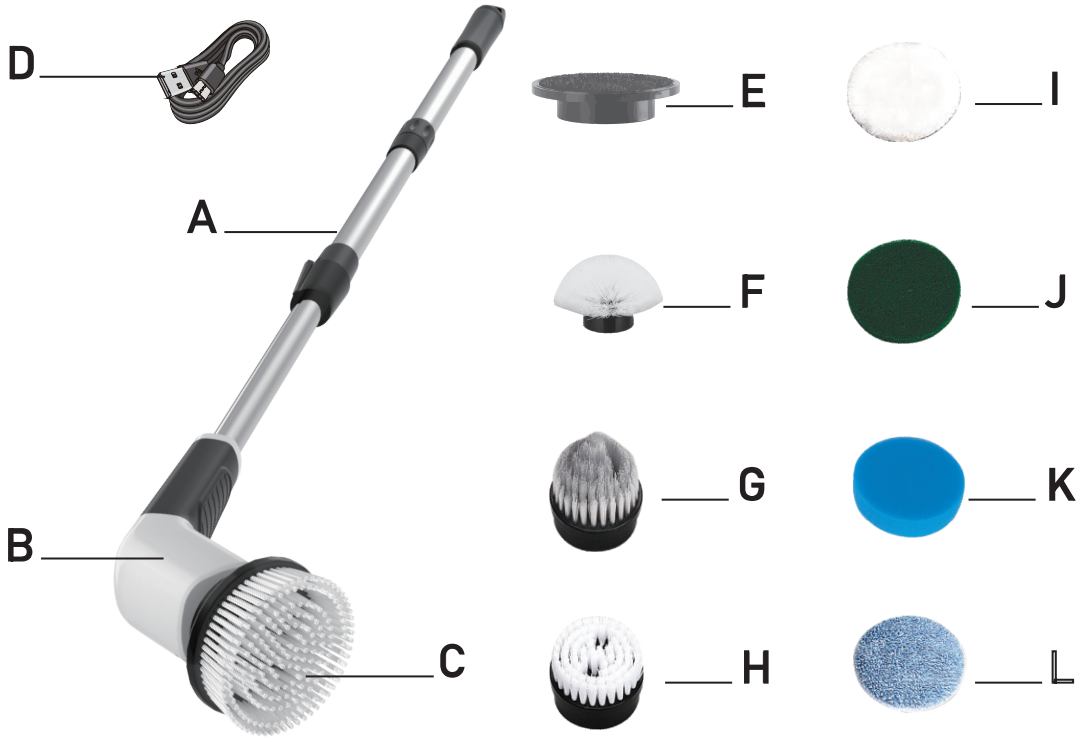

A . Extension Handle	B . Main Machine	C. Wide Flat Brush
D . USB Charging line	E . Brush Head Holder	F . Round Brush
G . Corner Brush	H . Small Flat Brush	I . Wool Cloth
J . Fiber Sponge	K . Sponge	L . Cloth