Welding Cart

242-1452

Owner's Manual



PRODUCT SPECIFICATIONS	
Weight Capacity	100 lbs
Overall Dim.	28″H x 27-3/4″D x 15-1/2″W

Need Assistance?

Call us on our toll free customer support line:

1-866-915-8626

- Technical questions
- Replacement parts
- Parts missing from package

TABLE OF CONTENTS

Important Safety Information 3
Assembly Instructions 4
Parts List and Diagram 5
Operation 5
Maintenance 5
Warranty 6

Important Safety Information

Assembly Precautions

1. Assemble only according to these instructions. Improper assembly can create hazards.
2. Wear ANSI-approved safety goggles and heavy-duty work gloves during assembly.
3. Keep assembly area clean and well lit.
4. Keep bystanders out of the area during assembly.
5. Do not assemble when tired or when under the influence of drugs or medication.
6. Weight capacity and other product capabilities apply to properly and completely assembled product only.

Use Precautions

1. This product is not a toy. Never allow children to play or come near this item.
2. Inspect before every use; do not use if parts are loose or damaged.
3. Do not exceed listed weight capacity, evenly distributed and balanced. **Be aware of dynamic loading!** Sudden load movement may briefly create excess load causing product failure.
4. Maintain product labels and nameplates. These carry important safety information.
5. Operate and store the Cart on a flat, dry, level surface.
6. Read welding equipment manual before use.
7. If using gas cylinders, be especially careful to prevent tipping or damage to the cylinders. Follow gas cylinder supplier's and gas supplier's safety instructions at all times.
8. Only use as intended.

Assembly Instructions

Read the <u>ENTIRE</u> IMPORTANT SAFETY INFORMATION section at the beginning of this document including all text under subheadings therein before set up or use of this product.

<u>Note:</u> When attaching hardware, hand tighten only until the unit is together, then use the appropriate tools to tighten all hardware.

1. Put a Wheel (2) on the end of the Axle (9) and secure it with Washer and Cotter Pin (11). See Figure A. Repeat on the other side.

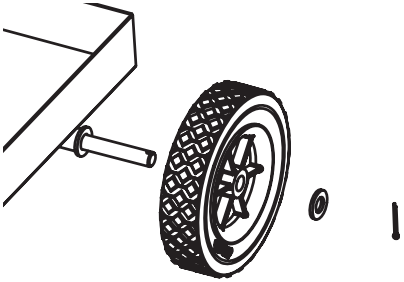


Figure A: Wheel Attachment

2. Using four Bolts, Washers, and Nuts (10), attach a Caster (3) to the Bottom Shelf (1). See Figure B. Repeat on other side.

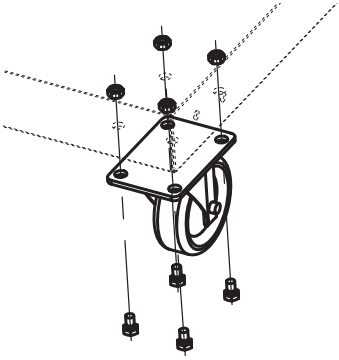


Figure B: Caster (3) Attachment

3. Connect the bottom (note the hole locations in the diagram) of the Left Support (7a) to the Bottom Shelf (1) using Bolts, Washers, and Nuts (10). See Figure C. Repeat on other side with Right Support (7b).

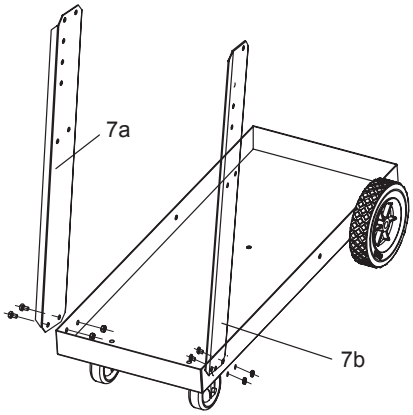



Figure C: Connection of Bottom Shelf (1) and Left Support (7a)

4. Attach the Middle Shelf (5) to the Left and Right Supports (7a,7b) using Bolts, Washers, and Nuts (10).
5. Place a Hook (8) over the holes on the outside of the top of a Support (7a/7b), and place the Bolts (10) through both the Hook (8), Support (7a/7b), and the Top Shelf (6). Secure with Washers and Nuts (10). Repeat on other side.
6. Attach the Back Panel (4) to the Bottom Shelf (1) using Bolts, Washers, and Nuts (10).
7. Attach the Back Panel (4) to the Middle Shelf (5) and the Top Shelf (6) using Bolts, Washers, and Nuts (10).
8. Insert the Chains (13) through the holes in the Back Panel (4).
9. Wrench tighten all of the hardware.

Parts List and Diagram

Part	Description	Qty
1	Bottom Shelf Asm.	1
2	Wheel	2
3	Swivel Caster	2
4	Back Panel	1
5	Middle Shelf	1
6	Top Shelf	1
7a	Left Support	1

Part	Description	Qty
7b	Right Support (not shown)	1
8	Hook	2
9	Axle	1
10	Bolt, Washer, Nut (set) M6x12	33
11	Flat Washer, Cotter Pin (set)	2
12	Cap	2
13	Chain	2

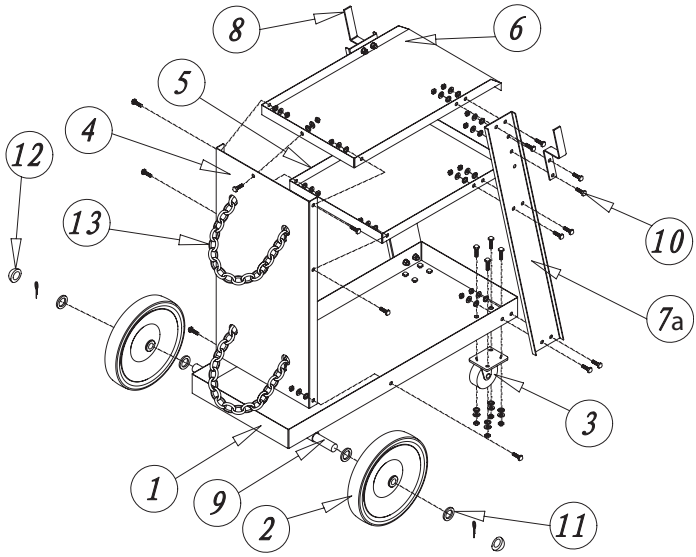

Operation

1. Make sure that the welder and all accessories combined do not exceed the weight capacity of this cart.
2. Place any gas cylinders on the back shelf, and secure in place with both chains. Adjust chains' length to hold the cylinder(s) securely.
3. Place the welder on the top shelf and the other accessories on the other shelves.
4. Make sure everything is secure and the cart is well balanced. If the welder is unstable or does not fit securely on the shelf, do not use that welder with this cart.

Maintenance

1. Periodically tighten all of the hardware.
2. Make sure the casters and wheels are free of all dirt, debris, or grease.

PERFORMAX™ WELDING CART WARRANTY

30-DAY MONEY BACK GUARANTEE:

This PERFORMAX™ brand welding cart carries our 30-Day Money Back Guarantee. If you are not completely satisfied with your PERFORMAX™ brand welding cart for any reason within thirty (30) days from the date of purchase, return the welding cart with your original receipt to any MENARDS® retail store, and we will provide you a refund – no questions asked.

2-YEAR LIMITED WARRANTY:

This PERFORMAX™ brand welding cart carries a 2-Year Limited Warranty to the original purchaser. If, during normal use, this PERFORMAX™ welding cart breaks or fails due to a defect in material or workmanship within two (2) years from the date of original purchase, simply bring this welding cart with the original sales receipt back to your nearest MENARDS® retail store. At its discretion, PERFORMAX™ agrees to have the welding cart or any defective part(s) repaired or replaced with the same or similar PERFORMAX™ product or part free of charge, within the stated warranty period, when returned by the original purchaser with original sales receipt. Not withstanding the foregoing, this limited warranty does not cover any damage that has resulted from abuse or misuse of the Merchandise. This warranty: (1) excludes expendable parts ; (2) shall be void if this welding cart is used for commercial and/or rental purposes; and (3) does not cover any losses, injuries to persons/property or costs. This warranty does give you specific legal rights and you may have other rights, which vary from state to state. Be careful, welding carts are dangerous if improperly used or maintained. Seller's employees are not qualified to advise you on the use of this Merchandise. Any oral representation(s) made will not be binding on seller or its employees. The rights under this limited warranty are to the original purchaser of the Merchandise and may not be transferred to any subsequent owner. This limited warranty is in lieu of all warranties, expressed or implied including warranties or merchantability and fitness for a particular purpose. Seller shall not be liable for any special, incidental, or consequential damages. The sole exclusive remedy against the seller will be for the replacement of any defects as provided herein, as long as the seller is willing or able to replace this product or is willing to refund the purchase price as provided above. For insurance purposes, seller is not allowed to demonstrate any of these power tools for you.

For questions / comments, technical assistance or repair parts –
Please Call Toll Free at: 1-866-915-8626 (M-F 9am-5pm EST)

SAVE YOUR RECEIPTS. THIS WARRANTY IS VOID WITHOUT THEM.

Distributed by: Menard, Inc., Eau Claire, WI 54703

15/09/2014